SAUNDERS®

Parts List

QUICK FLIP 120 AND 350

(Cat. No. 310-666 and 310-635)

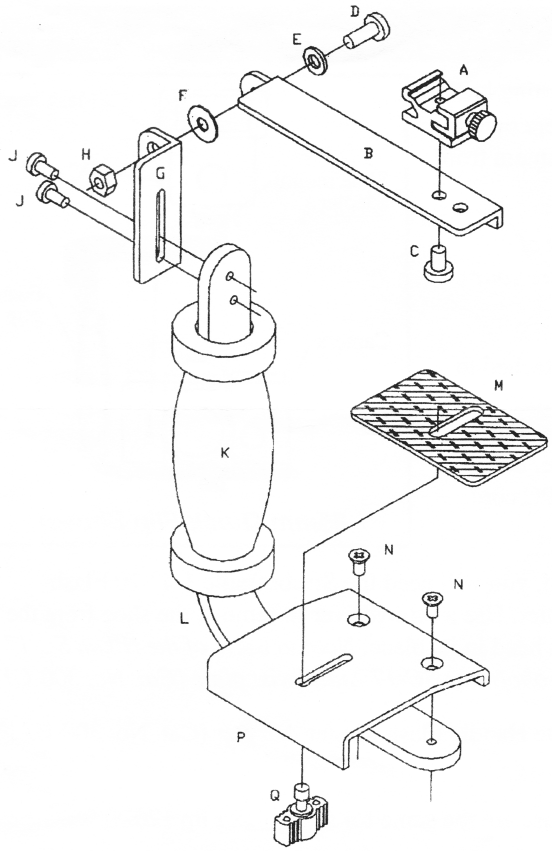

Quick Flip 120
(Cat. No. 310-666)

	Part Number	Description	Price
A.	324-100-10AS	Shoe Assembly	$12.00
B.	304-103-10AR	Swing Arm	7.00
C.	9PPR-420-06B	Shoe Mounting Screw	.50
D.	9CBS-420-10B	Arm Mounting Screw	.50
E.	9SPW-106-00G	Tension Washer	.50
F.	9SPW-101-00J	Washer	.50
G.	304-104-10SU	Pivot Support	6.00
H.	9NHR-420-00B	Nut	.50
J.	9PPR-032-06B	Pivot Mounting Screw	.50
K.	920-110-10GR	Grip	5.00
L.	305-102-10AR	Bracket	22.00
M.	305-101-10PD	Pad	3.00
N.	9FSR-032-06B	Platform Mounting Screw	.50
P.	305-103-10PF	Platform	5.00
Q.	903-108-10KB	Camera Mounting Knob	2.00

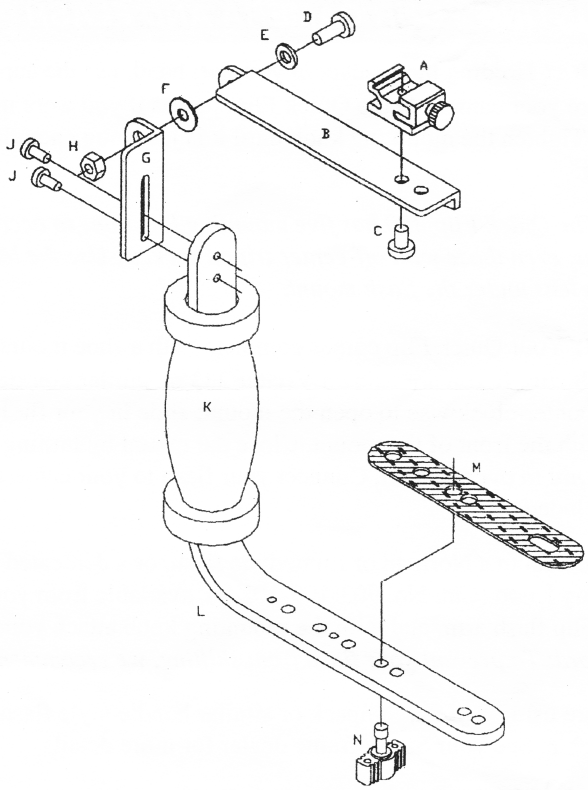

Quick Flip 350
(Cat. No. 310-635)

	Part Number	Description	Price
A.	324-100-10AS	Shoe Assembly	$12.00
B.	304-103-10AR	Swing Arm	7.00
C.	9PPR-420-06B	Shoe Mounting Screw	.50
D.	9CBS-420-10B	Arm Mounting Screw	.50
E.	9SPW-106-00G	Tension Washer	.50
F.	9SPW-101-00J	Washer	.50
G.	304-104-10SU	Pivot Support	6.00
H.	9NHR-420-00B	Nut	.50
J.	9PPR-032-06B	Pivot Mounting Screw	.50
K.	920-110-10GR	Grip	5.00
L.	304-102-10AR	Bracket	22.00
M.	304-101-10PD	Pad	3.00
N.	903-151-10SC	Camera Mounting Knob	2.00

FOR ORDERING INFORMATION, PLEASE CALL OR WRITE TO:
The Saunders Group
21 Jet View Drive • Rochester, NY 14624-4996 • (716) 328-7800 • Free Fax: (800) FYI-FOTO (394-3686)
E-Mail: saunders7@aol.com

Stroboframe®
Quick Flip 350 & Quick Flip 120 INSTRUCTIONS

Thank you for purchasing the Stroboframe Quick Flip. Used properly, the Quick Flip effectively eliminates the harsh shadows and red-eye often associated with flash photography. Please be sure to read and follow these instructions carefully; failure to do so can cause damage to your equipment.

MOUNTING YOUR CAMERA AND FLASH

CAMERA: Holding the bracket in your left hand, use the supplied 1/4"-20 mounting knob to secure your camera to the Quick Flip, just as if you were mounting your camera onto a tripod. Tighten the mounting knob until it is just snug enough to prevent your camera from shifting.

Note: The Quick Flip 350 has five mounting locations to accommodate a variety of cameras, even those with off-center tripod sockets. Use the location which centers your camera lens under the flash mount.

FLASH: Your Quick Flip comes complete with a shoe mount adapter already attached to the flash arm. If you are using a Vivitar 283 or similar non-dedicated flash unit, turn the red knob counter-clockwise to open the mount; slide in your flash shoe until its front edge is flush with the front of the mount. Close the mount by turning the knob clockwise, *being careful not to over-tighten.* Connect your flash to your camera using a standard PC cord (not included).

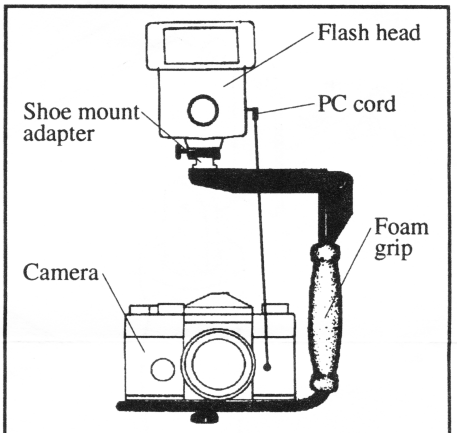

35mm Quick Flip Shown

If you are using a Norman or Lumedyne flash, or a dedicated flash and sync cord, you will need the Stroboframe 1/4"-20 Flash Mounting Knob (Cat. No. 903-109-10KB), available from your Stroboframe dealer. Use a screwdriver to remove the shoe from the Quick Flip flash arm, and with the mounting knob attach your sync cord or flash head in its place. *Note to users of the Nikon SC-17 Sync Cord: To prevent your flash from shifting, we recommend the use of the Stroboframe SC-17 Anti-Twist plate (Cat. No. 300-C17).*

If you are using a Metz, Sunpack or similar handle-style flash unit, an appropriate Handle Flash Mount Adapter (Cat. No. 300-HAN) is available. See your Stroboframe dealer for more details.

Properly installed, your setup should look like the illustration above. Setup and use are the same for the Quick Flip 120.

USING THE QUICK FLIP

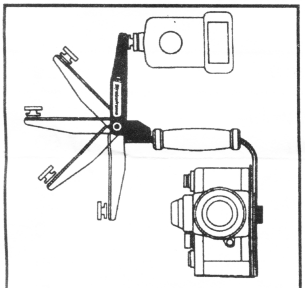
35mm Quick Flip Shown

When shooting horizontally, use your camera as you normally would; the distance that the Quick Flip adds between your lens and flash will effectively eliminate red-eye. When you rotate your camera to vertical, flip the flash arm 180° counter-clockwise, as shown at left. The Quick Flip keeps your flash centered above the lens, eliminating side shadows.

WARRANTY INFORMATION

All Stroboframe products are guaranteed for five years from date of original retail purchase against defects in materials or workmanship. Warranty is limited to repair or replacement (at Saunders' option) of any defective product. Repairs required as the result of obvious abuse, tampering, unauthorized service, modification, or misuse are excluded, as are claims for consequential damages. If service is required, please send the Quick Flip, along with a letter detailing the problem, to:

SAUNDERS
21 Jet View Drive
Rochester, NY 14624

Made in USA
©1995
Printed in USA